YAZOO

YAZOO YHR18K COMMERCIAL MOWER OWNER'S MANUAL

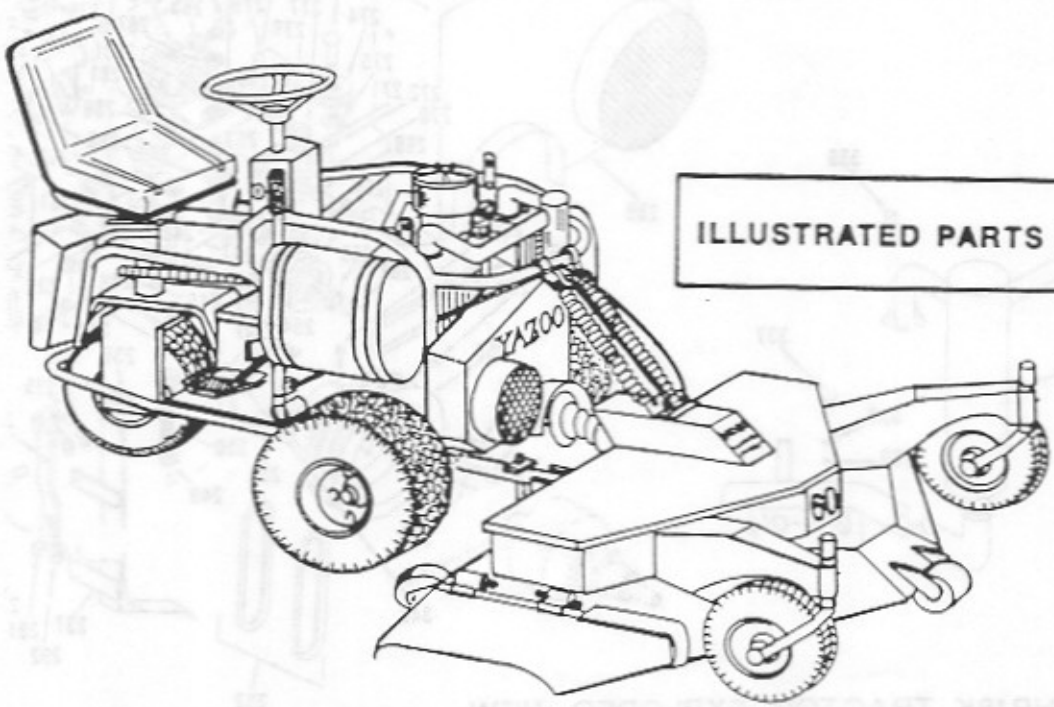

ILLUSTRATED PARTS LIST

LITERATURE NUMBER 1301-093

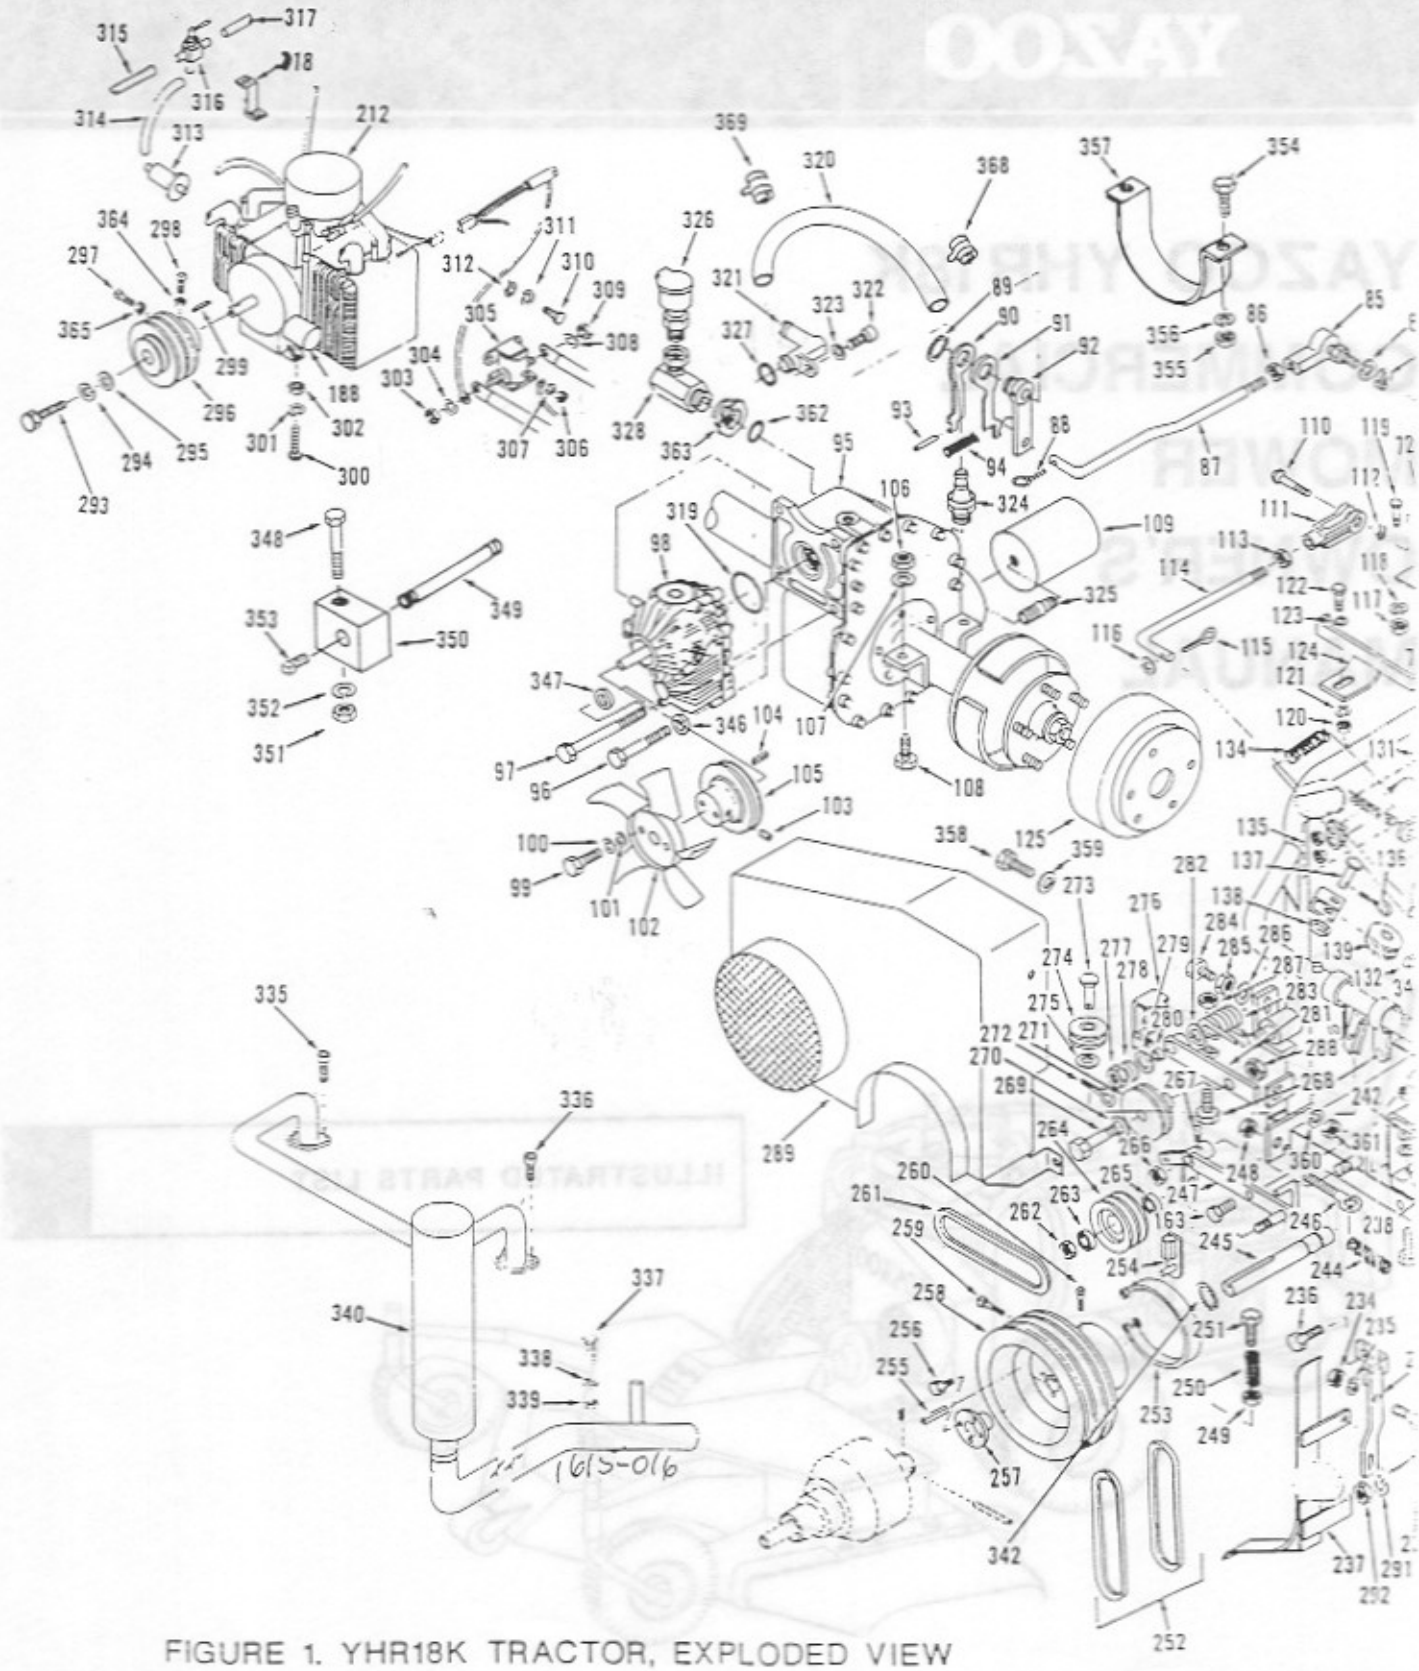

FIGURE 1. YHR18K TRACTOR, EXPLODED VIEW

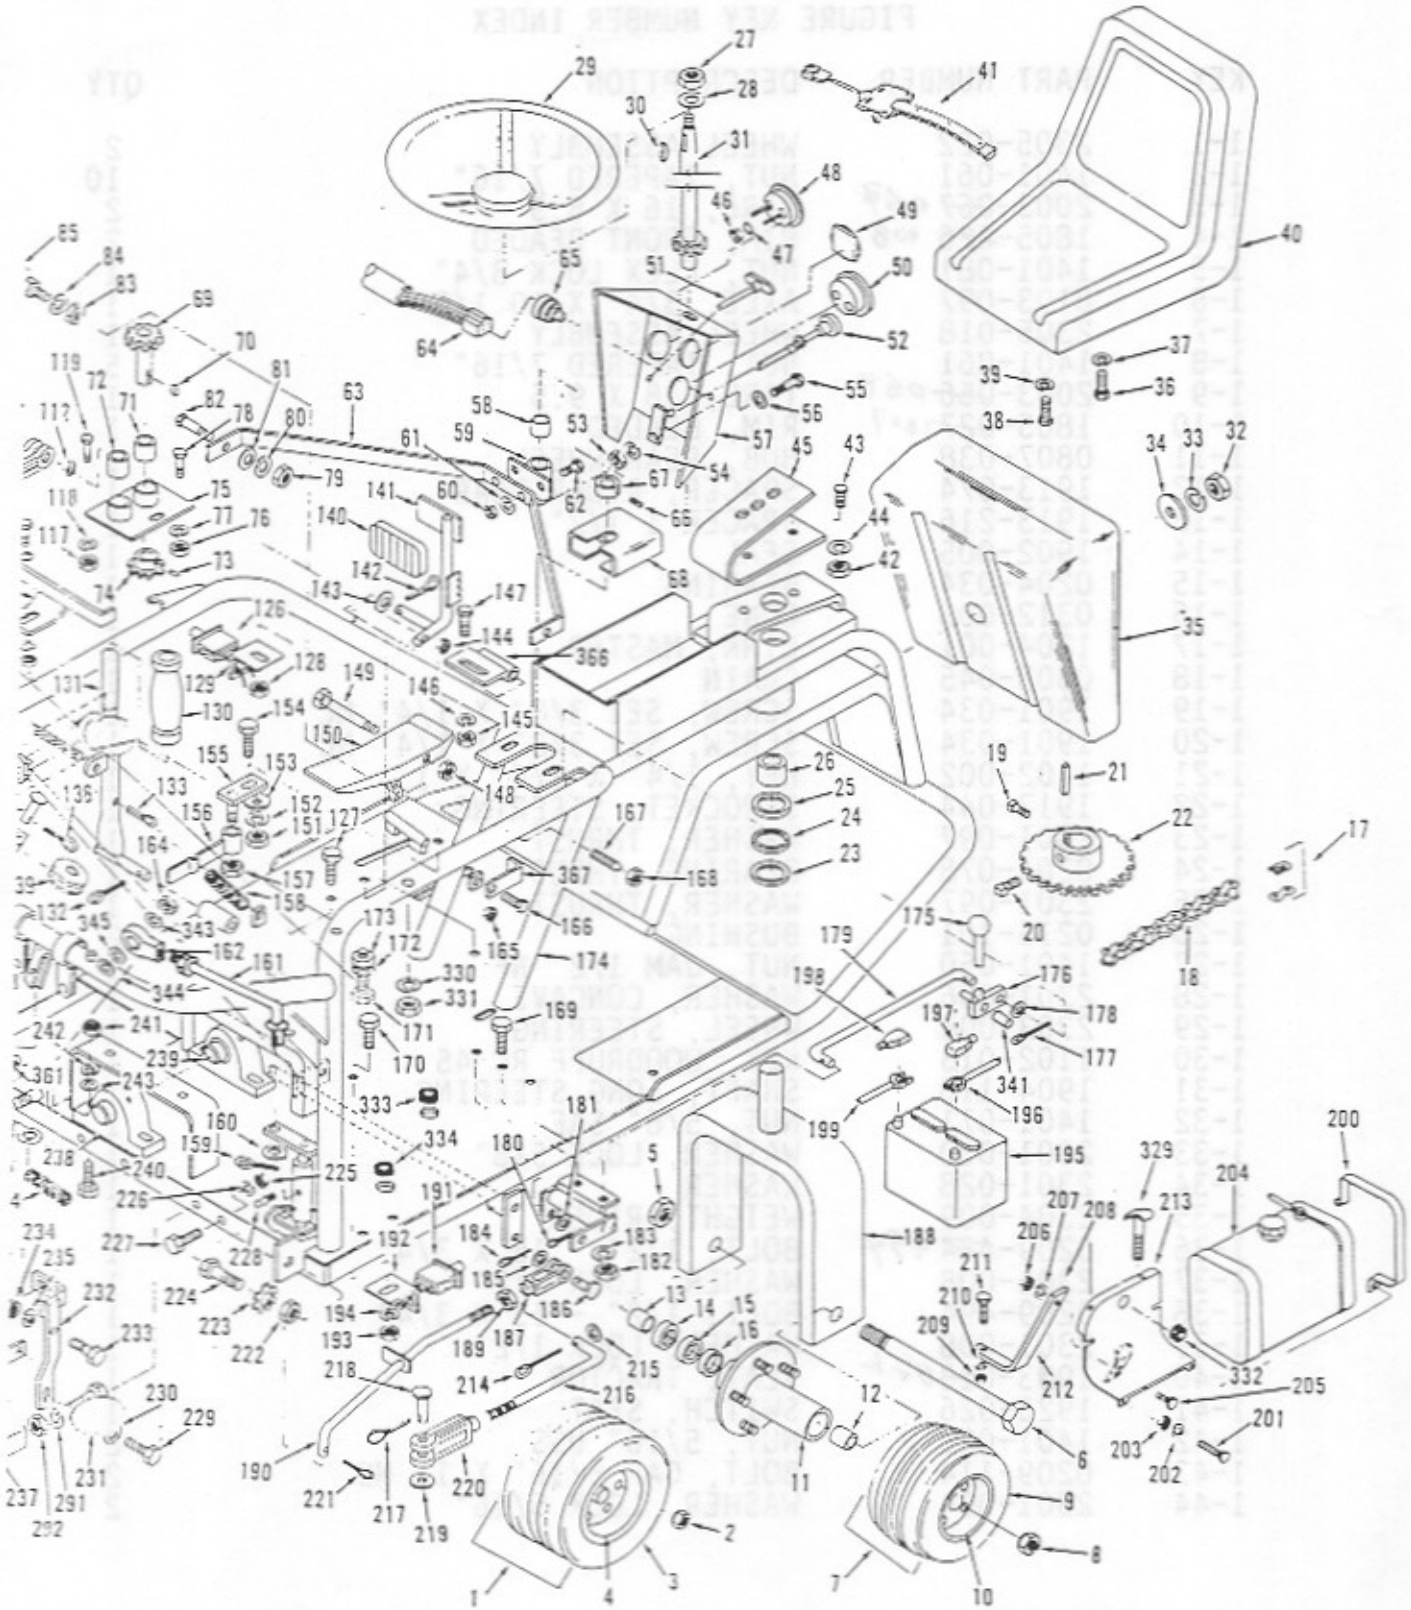

on Some units tank has bottom drain plug
1606-073 Bushing
215-179 plug

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-1	2305-022	WHEEL ASSEMBLY	2
1-2	1401-061	NUT, TAPERED 7/16"	10
1-3	2003-~~067~~ 054	TIRE, 16 X 6.5	2
1-4	1805-~~026~~ 008	RIM, FRONT BEADED	2
1-5	1401-081	NUT, FLEX LOCK 3/4"	1
1-6	0103-097	AXLE, 3/4" X 10 1/2"	1
1-7	2305-018	WHEEL ASSEMBLY	1
1-8	1401-061	NUT, TAPERED 7/16"	5
1-9	2003-~~066~~ 058	TIRE, 18 X 9.5	1
1-10	1805-~~027~~ 007	RIM, BEADED	1
1-11	0807-038	HUB, REAR WHEEL	1
1-12	1913-074	SPACER, RIDER REAR	1
1-13	1913-216	SPACER 1 1/2"	1
1-14	1902-005	SEAL	1
1-15	0204-034	BEARING	1
1-16	0312-008	CONE	1
1-17	1204-001	LINK, MASTER	1
1-18	0305-045	CHAIN	1
1-19	1901-034	SCREW, SET 3/8" X 1/4" NC	1
1-20	1901-034	SCREW, SET 3/8" X 1/4" NC	1
1-21	1102-002	KEY, 1/4" X 1/4" X 1"	1
1-22	1917-044	SPROCKET, STEERING	1
1-23	2301-097	WASHER, THRUST	1
1-24	0204-078	BEARING, THRUST	1
1-25	2301-097	WASHER, THRUST	1
1-26	0215-101	BUSHING	2
1-27	1401-050	NUT, JAM 1/2" NF	1
1-28	2301-096	WASHER, CONCAVE	1
1-29	2303-008	WHEEL, STEERING	1
1-30	1102-013	KEY, WOODRUFF RC 45	1
1-31	1904-116	SHAFT, LONG STEERING	1
1-32	1401-071	NUT, 5/8" SAE	1
1-33	2301-010	WASHER, LOCK 5/8"	1
1-34	2301-028	WASHER	1
1-35	2304-009	WEIGHT, RIDER	1
1-36	0209-~~484~~ 494	BOLT, 1/2" - 13 X 3/4"	1
1-37	2301-008	WASHER, LOCK 1/2"	1
1-38	0209-494	BOLT, 1/2" - 13 X 3/4"	1
1-39	2301-008	WASHER, LOCK 1/2"	1
1-40	19~~0~~3-~~013~~ 0217	SEAT, TRACTOR	1
1-41	1923-026	SWITCH, SEAT	1
1-42	1401-020	NUT, 5/16" USS	2
1-43	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-44	2301-004	WASHER, LOCK 5/16"	2

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-45	1916-080	SPRING, SEAT	1
1-46	1401-197	NUT	2
1-47	2301-284	WASHER	2
1-48	0706-002	GUAGE, AMMETER	1
1-49	0902-001	INCLINOMETER	1
1-50	0706-003	GUAGE, HOUR METER	1
1-51	0301-109	CABLE, THROTTLE	1
1-52	0301-110	CABLE, CHOKE	1
1-53	1401-010	NUT, 1/4" USS	1
1-54	2301-005	WASHER, LOCK 1/4"	1
1-55	0209-049	BOLT, 1/4" X 1"	1
1-56	2301-020	WASHER, FLAT 1/4"	1
1-57	1613-002	PANEL, RIDER INSTRUMENT	1
1-58	0215-103	BUSHING, STEERING	1
1-59	0214-221	BRACKET, UPPER STEERING	1
1-60	1401-020	NUT, 5/16" USS	2
1-61	2301-004	WASHER, LOCK 5/16"	2
1-62	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-63	0214-220	BRACKET, UPPER STEERING	1
1-64	0811-037	HARNESS, WIRING YHR-18K	1
1-65	1923-009	SWITCH, PANEL	1
1-66	1901-006	SCREW, SET 5/16" X 1"	1
1-67	0311-003	COLLAR	1
1-68	0704-084	GUARD, STEERING	1
1-69	1904-115	SHAFT, INNER STEERING	1
1-70	1102-013	KEY, WOODRUFF RC 45	1
1-71	0215-103	BUSHING, STEERING	1
1-72	0215-103	BUSHING, STEERING	1
1-73	1901-~~006~~ 136	SCREW, SET 5/16" X 1"	1
1-74	1917-045	SPROCKET, SMALL STEERING	1
1-75	0214-144	BRACKET	1
1-76	1401-020	NUT, 5/16" USS	2
1-77	2301-004	WASHER, LOCK 5/16"	2
1-78	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-79	1401-020	NUT, 5/16" USS	2
1-80	2301-004	WASHER, LOCK 5/16"	2
1-81	2301-021	WASHER, FLAT 5/16"	2
1-82	0209-138	BOLT, 5/16" X 2"	2
1-83	1401-032	NUT, 3/8" SAE	1
1-84	2301-006	WASHER, LOCK 3/8"	1
1-85	0502-002	END, ROD	1
1-86	1401-032	NUT, 3/8" SAE	1
1-87	1808-283	ROD, DIRECTIONAL CONTROL	1
1-88	1604-002	PIN, COTTER 3/32" X 1"	1
1-89	1806-008	RING, SNAP	1
1-90	0214-453	BRACKET, NEUTRAL RETAINER	1
1-91	0214-453	BRACKET, NEUTRAL RETAINER	1
1-92	0102-135	ARM, FORWARD/REVERSE	1

KEY	PART NUMBER	DESCRIPTION	QTY
1-93	1604-083	PIN, ROLL 1/4" X 1 1/4"	1
1-94	1916-177	SPRING, SMALL	1
1-95	2006-075	ASSEMBLY, HYDROSTATIC TRANSMISSION	1
1-96	0209-161	BOLT, 5/16" X 3"	2
1-97	0209-831	BOLT, 5/16" X 5 1/4" NC	2
1-98	2006-073	TRANSMISSION, BDU 21	1
1-99	0209-021	BOLT, 1/4" X 3/4" USS	2
1-100	2301-003	WASHER, LOCK 1/4"	2
1-101	2301-020	WASHER, FLAT 1/4"	2
1-102	0612-006	FAN, BLOWER EATON	1
1-103	1901-006	SCREW, SET 5/16" X 1"	1
1-104	1102-059	KEY, 5MM X 1.250	1
1-105	1608-407	PULLEY, TRANSMISSION	1
1-106	1401-030	NUT, 3/8" USS	2
1-107	2301-006	WASHER, LOCK 3/8"	2
1-108	0209-350	BOLT, 3/8" X 2 1/2" NC HH	2
1-109	0610-018	FILTER, TRANSMISSION OIL	1
1-110	~~1604-038~~ 0209-138	~~PIN~~, 5/16" X ~~1 1/4"~~ 2" Bolt	1
1-111	2501-027	YOKE	1
1-112	1604-002	PIN, COTTER 3/32" X 1"	1
1-113	1401-020	NUT, 5/16" USS	1
1-114	1808-150	ROD	1
1-115	1604-002	PIN, COTTER 3/32" X 1"	1
1-116	2301-021	WASHER, FLAT 5/16"	1
1-117	1401-020	NUT, 5/16" USS	1
1-118	2301-004	WASHER, LOCK 5/16"	1
1-119	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-120	1401-020	NUT, 5/16" USS	1
1-121	2301-004	WASHER, LOCK 5/16"	1
1-122	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-123	2301-021	WASHER, FLAT 5/16"	1
1-124	0214-206	BRACKET	1
1-125	0217-018	KIT, BRAKE DRUM	2
1-126	1923-033	SWITCH ASSEMBLY, SAFETY	1
1-127	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-128	1401-020	NUT, 5/16" USS	1
1-129	0214-230	BRACKET	1
1-130	0703-~~016~~ 034	GRIP, SPONGE 7/8"	1
1-131	1201-008	LEVER, CUTTING SECTION	1
1-132	1604-002	PIN, COTTER 3/32" X 1"	1
1-133	1604-038	PIN, COTTER 3/16" X 1"	1
1-134	1916-012	SPRING, CUTTING SECTION LEVER	1
1-135	0307-002	CLAMP ASSEMBLY	1
1-136	1604-002	PIN, COTTER 3/32" X 1"	1
1-137	1604-107	PIN	1
1-138	1913-040	SPACER, 5/8" X 7/8"	1
1-139	1809-001	ROLLER, CABLE	1
1-140	1601-001	PAD	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-141	1602-011	PEDAL	1
1-142	1604-002	PIN, COTTER 3/32" X 1"	1
1-143	2301-022	WASHER, FLAT 3/8"	1
1-144	1401-021	NUT, LOCK 5/16" USS	1
1-145	1401-020	NUT, 5/16" USS	1
1-146	2301-004	WASHER, LOCK 5/16"	1
1-147	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-148	1401-021	NUT, LOCK 5/16" USS	1
1-149	0209-181	BOLT, 5/16" X 3 3/4"	1
1-150	1602-024	PEDAL, DIRECTIONAL CONTROL	1
1-151	1401-020	NUT, 5/16" USS	1
1-152	2301-004	WASHER, LOCK 5/16"	1
1-153	2301-021	WASHER, FLAT 5/16"	1
1-154	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-155	0214-~~159~~463	BRACKET	1
1-156	0100-007	ACTUATOR, SWITCH	1
1-157	1401-021	NUT, LOCK 5/16" USS	1
1-158	1916-012	SPRING, CUTTING SECTION LEVER	1
1-159	1604-002	PIN, COTTER 3/32" X 1"	1
1-160	2301-022	WASHER, FLAT 3/8"	1
1-161	1808-284	ROD, FRONT ENGAGING	1
1-162	0502-002	END, ROD SWIVEL	1
1-163	0209-326	BOLT, 3/8" X 1 1/2"	1
1-164	1401-030	NUT, 3/8" USS	1
1-165	1401-021	NUT, LOCK 5/16" USS	1
1-166	0209-108	BOLT, 5/16" X 3/4" USS	1
1-167	1604-157	PIN, SWITCH	1
1-168	1401-020	NUT, 5/16" USS	1
1-169	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-170	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-171	0209-050	BOLT, 1/4" X 2"	1
1-172	1401-010	NUT, 1/4" USS	1
1-173	1401-010	NUT, 1/4" USS	1
1-174	0605-499	FRAME ASSEMBLY	1
1-175	1104-012	KNOB, 3/8" - 16 HYDRO	1
1-176	1201-062	LEVER, ENGAGING HYD.	1
1-177	1604-002	PIN, COTTER 3/32" X 1"	1
1-178	1913-040	SPACER 5/8" X 7/8"	1
1-179	1808-202	ROD, UPPER BLADE ENGAGING	1
1-180	1604-002	PIN, COTTER 3/32" X 1"	1
1-181	2301-021	WASHER, FLAT 5/16"	2
1-182	1401-020	NUT, 5/16" USS	2
1-183	2301-004	WASHER, LOCK 5/16"	2
1-184	1604-002	PIN, COTTER 3/32" X 1"	1
1-185	2301-021	WASHER, FLAT 5/16"	1
1-186	1604-013	PIN, 5/16" X 1 1/4" R	1
1-187	2501-027	YOKE	1
1-188	~~0610-016~~ 2501-027 ~~FILTER, OIL~~ YOKE		1

KEY	PART NUMBER	DESCRIPTION	QTY
1-189	1401-020	NUT, 5/16" USS	1
1-190	1808-285	ROD, BLADE ENGAGING	1
1-191	1923-030	SWITCH ASSEMBLY, SAFETY	1
1-192	0214-430	BRACKET	1
1-193	1401-020	NUT, 5/16" USS	1
1-194	2301-004	WASHER, LOCK 5/16"	1
1-195	0203-003	BATTERY, PTO MODELS	1
1-196	0301-058	CABLE (POSITIVE)	1
1-197	0303-016	CAP, BATTERY, RED	1
1-198	0303-017	CAP, BATTERY, BLACK	1
1-199	0301-057	CABLE (NEGATIVE)	1
1-200	1918-022	STRAP, TANK BRACKET	4
1-201	0209-049	BOLT, 1/4" X 1"	4
1-202	2301-003	WASHER, LOCK 1/4"	4
1-203	1401-010	NUT, 1/4" USS	4
1-204	2001-023	TANK, FUEL	2
1-205	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-206	1401-020	NUT, 5/16" USS	2
1-207	2301-004	WASHER, LOCK 5/16"	2
1-208	0214-475	BRACKET, LOWER TANK MOUNTING L.H	1
1-209	1401-030	NUT, 3/8" USS	2
1-210	2301-006	WASHER, LOCK 3/8"	2
1-211	0209-326	BOLT, 3/8" X 1 1/2"	2
1-212	0104-006	ASSEMBLY, AIR CLEANER	1
1-213	0214-455	BRACKET, TANK MOUNTING	2
1-214	1604-002	PIN, COTTER 3/32" X 1"	2
1-215	2301-021	WASHER, FLAT 5/16"	2
1-216	1808-200	ROD, BRAKE, HYDRO	2
1-217	1604-002	PIN, COTTER 3/32" X 1"	2
1-218	1604-013	PIN, 5/16" X 1 1/4" R	2
1-219	2301-021	WASHER, FLAT 5/16"	2
1-220	2501-027	YOKE	2
1-221	1604-002	PIN, COTTER 3/32" X 1"	1
1-222	1401-070	NUT, JAM 5/8" SAE	2
1-223	2301-010	WASHER, LOCK 5/8"	2
1-224	0209-617	BOLT, 5/8" X 1 1/2" NC	2
1-225	1401-020	NUT, 5/16" USS	1
1-226	2301-004	WASHER, LOCK 5/16"	1
1-227	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-228	0603-004	FITTING, GREASE	1
1-229	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-230	2301-004	WASHER, LOCK 5/16"	1
1-231	1401-020	NUT, 5/16" USS	1
1-232	0214-456	BRACKET, BELT GUARD MTG. ASSEMBLY	1
1-233	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-234	1401-020	NUT, 5/16" USS	1
1-235	2301-004	WASHER, LOCK 5/16"	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-236	0209-120	BOLT, 5/16" X 1 1/4"	1
1-237	0704-364	GUARD, BELT	1
1-238	0204-077	BEARING, PILLOW BLOCK	1
1-239	0204-077	BEARING, PILLOW BLOCK	1
1-240	0209-425	BOLT, 7/16" X 1 1/2"	2
1-241	1401-040	NUT, 7/16"	2
1-242	2301-007	WASHER, LOCK 7/16"	2
1-243	2301-022	WASHER, FLAT 3/8"	2
1-244	1916-~~[illegible]~~116	SPRING	1
1-245	1904-191	SHAFT, PULLEY PTO	1
1-246	0212-026	BOLT, EYE 3 1/16" DIA.	1
1-247	0102-134	ARM ENGAGING ASSEMBLY	1
1-248	1401-102	NUT, .375 X 16 CENT	1
1-249	1401-032	NUT, 3/8" SAE	1
1-250	1916-174	SPRING	1
1-251	0209-341	BOLT, 3/8" X 2" NF	1
1-252	0205-528	BELT, DRIVE (DAYCO # 7-1092)	2
1-253	0217-020	BRAKE, BAND	1
1-254	0214-276	BRACKET, BRAKE BAND	1
1-255	1102-058	KEY, 1/4" X 1/4" X 4"	1
1-256	0209-021	BOLT, 1/4" X 3/4" USS	4
1-257	0215-175	BUSHING	1
1-258	1608-~~[illegible]~~394	PULLEY, ~~ENGINE [illegible]~~ PTO	1
1-259	1901-136	SCREW, SET 5/16" X 1"	1
1-260	1901-136	SCREW, SET 5/16" X 1"	1
1-261	0205-527	BELT, DRIVE # AX33	1
1-262	1401-072	NUT, FLEX LOCK 5/8" SAE	1
1-263	0204-019	BEARING, HUB 5/8" ID	1
1-264	1608-148	PULLEY, ENGINE IDLER	1
1-265	0204-019	BEARING, HUB 5/8" ID	1
1-266	1401-072	NUT, FLEX LOCK 5/8" SAE	1
1-267	0603-004	FITTING, GREASE	1
1-268	0209-108	BOLT, 5/16" X 3/4" USS	1
1-269	0209-517	BOLT, 1/2" X 1/2" NF	1
1-270	1913-200	SPACER, 1 1/8" OD X 7/8" ID	1
1-271	1608-~~[illegible]~~365	PULLEY, ~~TRANSMISSION~~ Plastic Idler	1
1-272	1604-002	PIN, COTTER 3/32" X 1"	1
1-273	1604-107	PIN	1
1-274	1809-001	ROLLER, CABLE	1
1-275	1913-040	SPACER, 5/8" X 7/8"	1
1-276	0214-467	BRACKET, ACTUATOR	1
1-277	1401-070	NUT, JAM 5/8" SAE	1
1-278	1913-095	SPACER	1
1-279	1913-095	SPACER	1
1-280	0215-177	BUSHING	1
1-281	0102-133	ARM, IDLER ASSEMBLY	1
1-282	1913-095	SPACER	1
1-283	1916-~~[illegible]~~161	SPRING	1

KEY	PART NUMBER	DESCRIPTION	QTY
1-284	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-285	1401-020	NUT, 5/16" USS	1
1-286	2301-004	WASHER, LOCK 5/16"	1
1-287	1401-020	NUT, 5/16" USS	1
1-288	1401-051	NUT, FULL 1/2" NF LK	1
1-289	0704-363	GUARD, FRONT	1
1-290	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-291	2301-004	WASHER, LOCK 5/16"	1
1-292	1401-020	NUT, 5/16" USS	1
1-293	0209-809	BOLT, 7/17" X 1" NF	1
1-294	2301-007	WASHER, LOCK 7/16"	1
1-295	2301-077	WASHER, FLAT RETAINER 5/16"	1
1-296	1608-405	PULLEY, ENGINE YHR-18K	1
1-297	1901-136	SCREW, SET 5/16" X 1"	1
1-298	1901-136	SCREW, SET 5/16" X 1"	1
1-299	1102-012	KEY, 1/4" X 1/4" X 3"	1
1-300	0209-326	BOLT, 3/8" X 1 1/2" NC	3
1-300A	0209-331	BOLT, 3/8" X 1 3/4" NC	1
1-301	2301-006	WASHER, LOCK 3/8"	4
1-302	1401-030	NUT, 3/8" USS	4
1-303	1401-020	NUT, 5/16" USS	1
1-304	2301-004	WASHER, LOCK 5/16"	1
1-305	1923-007	SOLENOID, STARTER	1
1-306	1401-197	NUT	1
1-307	2301-001	WASHER, LOCK 3/16"	1
1-308	2301-004	WASHER, LOCK 5/16"	1
1-309	1401-020	NUT, 5/16" USS	1
1-310	0208-021	BOLT, 1/4" X 3/4" RSM	2
1-311	2301-003	WASHER, LOCK 1/4"	2
1-312	1401-010	NUT, 1/4" USS	2
1-313	0610-011	FILTER, FUEL	1
1-314	0812-024	HOSE, GAS LINE	1
1-315	0812-029	HOSE, GAS LINE	1
1-316	2201-030	VALVE, FUEL SHUT-OFF	1
1-317	0812-023	HOSE, GAS LINE	1
1-318	0214-315	BRACKET, GATE VALVE MOUNTING	1
1-319	1902-073	O-RING	1
1-320	0812-067	HOSE	1
1-321	0101-054	FITTING, HOSE	1
1-322	0209-834	BOLT	1
1-323	2301-296	WASHER, FLAT	1
1-324	0101-153	FITTING, HOSE	1
1-325	0101-155	ADAPTOR	1
1-326	0315-~~001~~ 012	CUP, OIL BREATHER	1
1-327	1806-145	O-RING	1
1-328	0101-156	ADAPTOR	1
1-329	0209-~~138~~ 834	BOLT, 5/16" X 2"	~~2~~ 4
1-330	2301-004	WASHER, LOCK 5/16"	~~2~~ 4

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-331	1401-020	NUT, 5/16" USS	4
1-332	1811-004	GROMMET, RUBBER	1
1-333	1811-028	GROMMET, RUBBER	1
1-334	1811-004	GROMMET, RUBBER	1
1-335	1901-171	SCREW, 5/16" X 3/4"	2
1-336	1901-171	SCREW, 5/16" X 3/4"	2
1-337	0209-114	BOLT, CAP 5/16" X 1"	1
1-338	2301-004	WASHER, LOCK 5/16"	1
1-339	1401-020	NUT, 5/16" USS	1
1-340	1304-016	MUFFLER	1
1-341	0215-026	BUSHING, 5/8" X 1/2"	1
1-342	1806-008	RING, SNAP	1
1-343	2301-006	WASHER, LOCK 3/8"	1
1-344	2301-022	WASHER, FLAT 3/8"	1
1-345	2301-022	WASHER, FLAT 3/8"	1
1-346	2301-020	WASHER, FLAT 1/4"	1
1-347	2301-020	WASHER, FLAT 1/4"	1
1-348	0209-331	BOLT, 3/8" X 1 3/4" USS	1
1-349	0812-039	HOSE, OIL DRAIN	1
1-350	0101-123	ADAPTOR, OIL DRAIN	1
1-351	1401-030	NUT, 3/8" USS	1
1-352	2301-006	WASHER, LOCK 3/8"	1
1-353	1606-038	PLUG, SQUARE 3/8"	1
1-354	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-355	1401-020	NUT, 5/16" USS	2
1-356	2301-004	WASHER, LOCK 5/16"	2
1-357	0704-367	GUARD, OIL FILTER	1
1-358	0209-049	BOLT, 1/4" X 1"	1
1-359	2301-020	WASHER, FLAT 1/4"	1
1-360	2301-003	WASHER, LOCK 1/4"	1
1-361	1401-010	NUT, 1/4" USS	1
1-362	1806-001	O-RING	1
1-363	1401-128	NUT, CONDUIT 1/2"	1
1-364	1401-020	NUT, 5/16" USS	1
1-365	1401-020	NUT, 5/16" USS	1
1-366	0214-153	Bracket	1
1-367	0217-012	Bracket, park lock	1
1-368	0307-039	Clamp, hose	1
1-369	0307-039	Clamp, hose	1

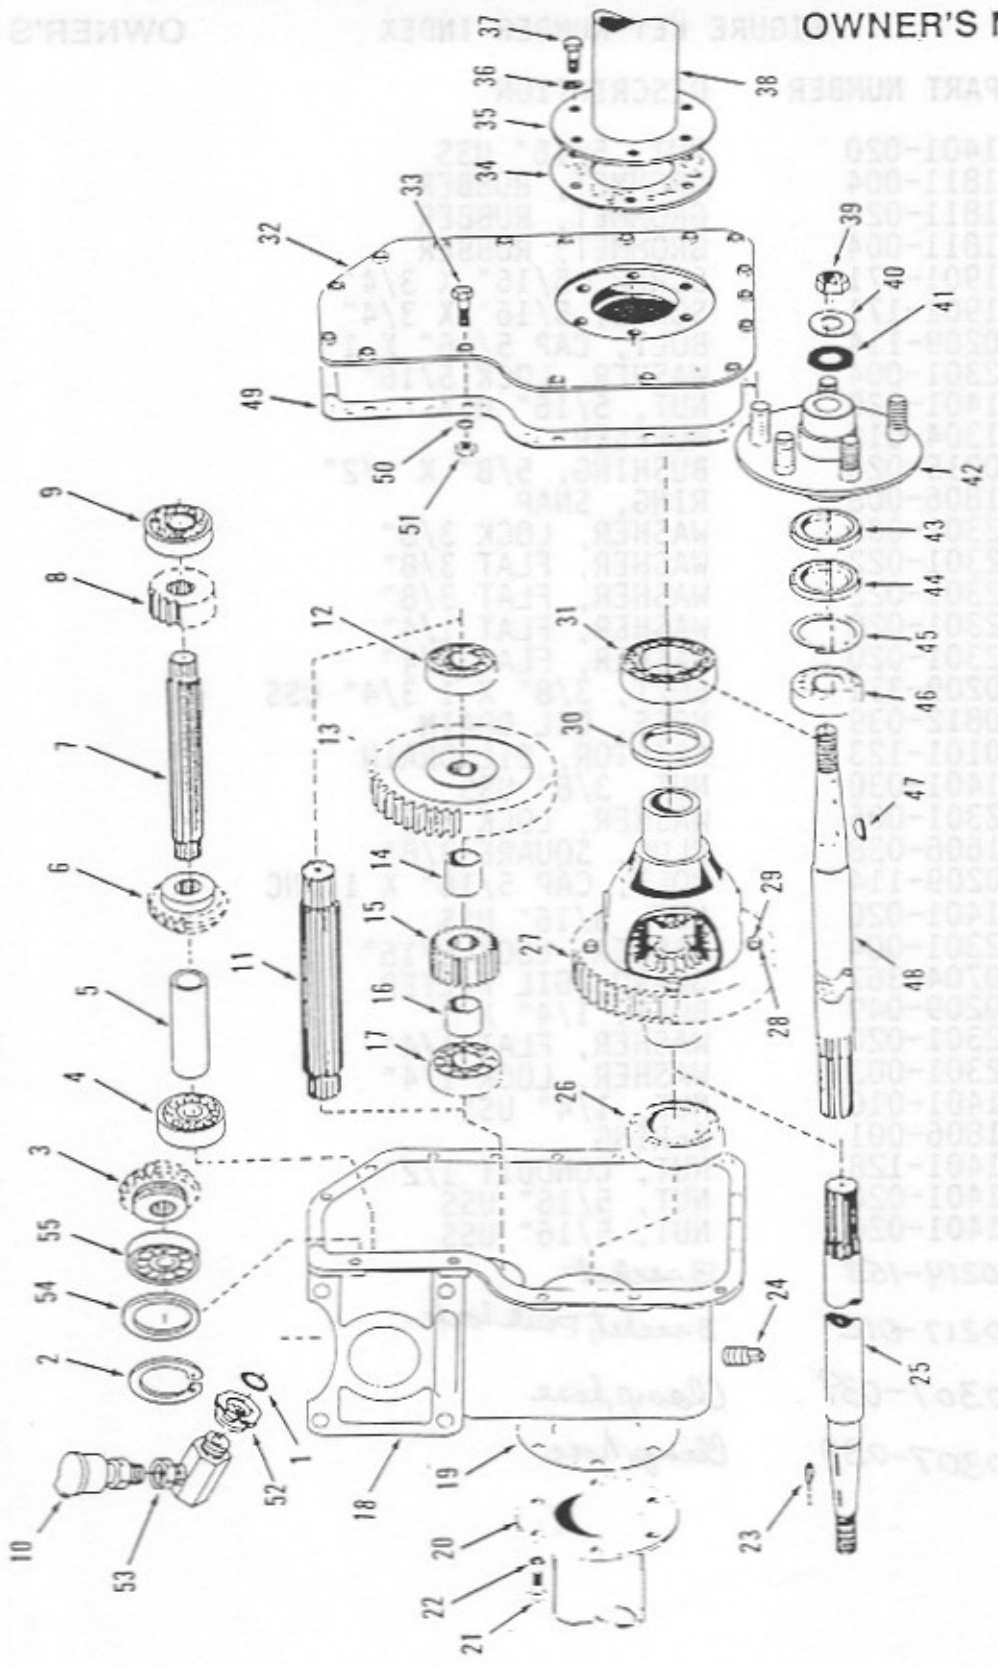

FIGURE 2. TRANSMISSION, EXPLODED VIEW

KEY	PART NUMBER	DESCRIPTION	QTY
2-1	1806-001	O-RING	1
2-2	1806-144	RING, SNAP	1
2-3	0702-148	GEAR, MITRE	1
2-4	0204-040	BEARING, BALL	1
2-5	1913-268	SPACER, TRANSAXLE	1
2-6	0702-147	GEAR, MITRE	1
2-7	1904-154	SHAFT, INTERNAL DRIVE	1
2-8	0702-057	GEAR, TRANSMISSION	1
2-9	0204-040	BEARING, BALL	1
2-10	0315-001	CUP, OIL BREATHER	1
2-11	1904-154	SHAFT, INTERNAL DRIVE	1
2-19	0701-022	GASKET	1
2-20	0806-336	HOUSING, AXLE	1
2-21	0209-307	BOLT, 3/8" X 3/4" NC	6
2-22	2301-006	WASHER, LOCK 3/8"	6
2-23	1102-013	KEY, WOODRUFF	1
2-24	1606-006	PLUG, DRAIN	1
2-25	0103-~~[illegible]~~081	AXLE, SHORT	1
2-26	0204-039	BEARING, DIFFERENTIAL	1
2-27	0702-054	GEAR, TRANSMISSION	1
2-28	2301-006	WASHER, LOCK 3/8"	2
2-29	0209-318	BOLT, 3/8" X 1" NF HE	2
2-30	1913-034	SPACER, DIFFERENTIAL	1
2-31	0204-039	BEARING, DIFFERENTIAL	1
2-32	0304-156	CASE, HALF, SHALLOW	1
2-33	0209-120	BOLT, 5/16" X 1"	17
2-34	0701-022	GASKET	1
2-35	0806-091	HOUSING, AXLE LONG	1
2-36	2301-006	WASHER, LOCK 3/8"	6
2-37	0209-307	BOLT, 3/8" X 3/4" NC	6
2-38	0806-091	HOUSING, AXLE LONG	1
2-39	1401-071	NUT, FULL 5/8" SAE	10
2-40	2301-096	WASHER, CUP 5/8"	10
2-41	1806-001	O-RING, 1/4" X 1"	2
2-42	0807-036	HUB, DRIVE WHEEL	2
2-43	1902-012	SEAL, AXLE	2
2-44	1902-012	SEAL, AXLE	2
2-45	1207-025	RING, LOCK	2
2-46	0204-038	BEARING, AXLE	2
2-47	1102-013	KEY, WOODRUFF	1
2-48	0103-~~[illegible]~~082	AXLE, LONG	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-49	0701-103	GASKET, CASE	1
2-50	2301-004	WASHER, LOCK 5/16"	17
2-51	1401-020	NUT, 5/16" USS	17
2-52	1401-128	NUT, CONDUIT 1/2"	1
2-53	0101-156	ADAPTOR	1
2-54	1913-269	SPACER	1
2-55	0204-159	BEARING, BALL	1

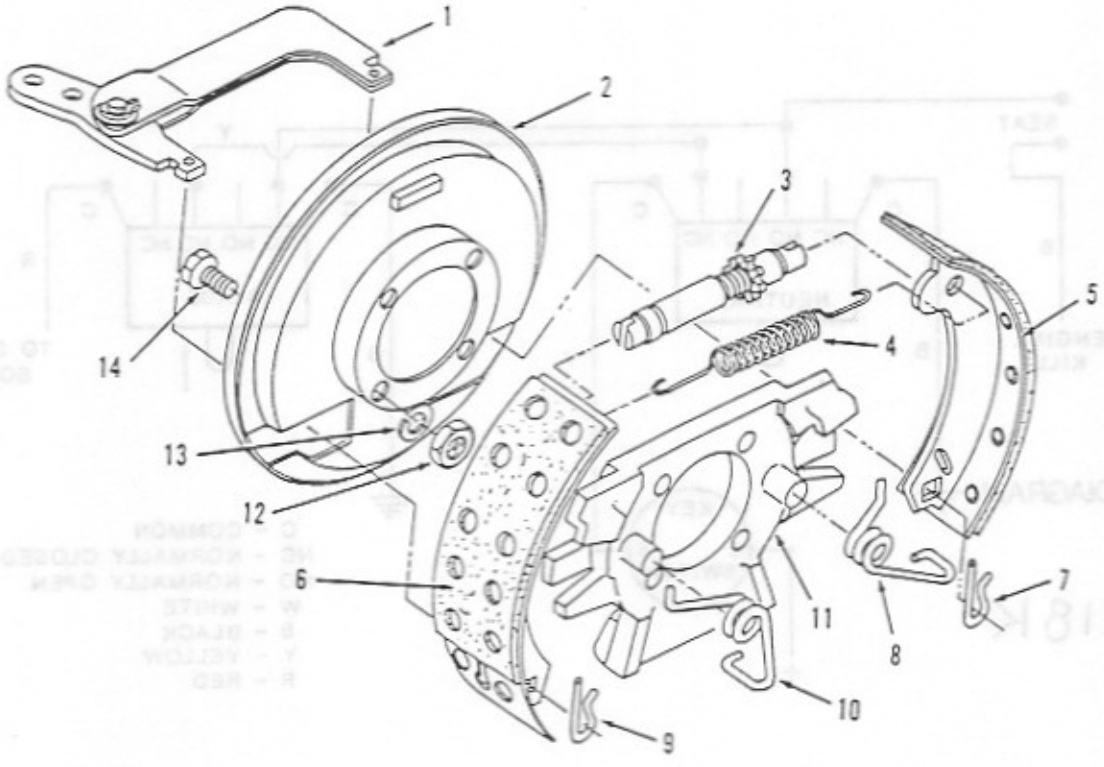

FIGURE 3. BRAKE, EXPLODED VIEW.

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
3-1	1201-095	ASSY. PARKING BRAKE STRUT AND LEVER	2
3-2	1906-015	SHIELD, DUST	2
3-3	1901-216	ASSY., ADJUSTING SCREW PIVOT NUT	2
3-4	1916-145	SPRING, ADJUSTING SCREW (BLUE)	2
3-5	1908-013	ASSY., SHOE AND LINING	2
3-6	1908-012	ASSY., SHOE AND LINING	2
3-7	1604-133	RETAINER, PARKING BRAKE LEVER PIN	2
3-8	1916-144	SPRING, SHOE RETURN (RH) RED	2
3-9	1604-133	RETAINER, PARKING BRAKE LEVER PIN	2
3-10	1916-143	SPRING, SHOE RETURN (LH) GREEN	2
3-11	1935-003	TORQUE SPIDER, FINISHED	2
3-12	1401-020	NUT, 5/16" USS	8
3-13	2301-004	WASHER, LOCK 5/16"	8
3-14	0209-120	BOLT, 5/16" X 1 1/4"	8

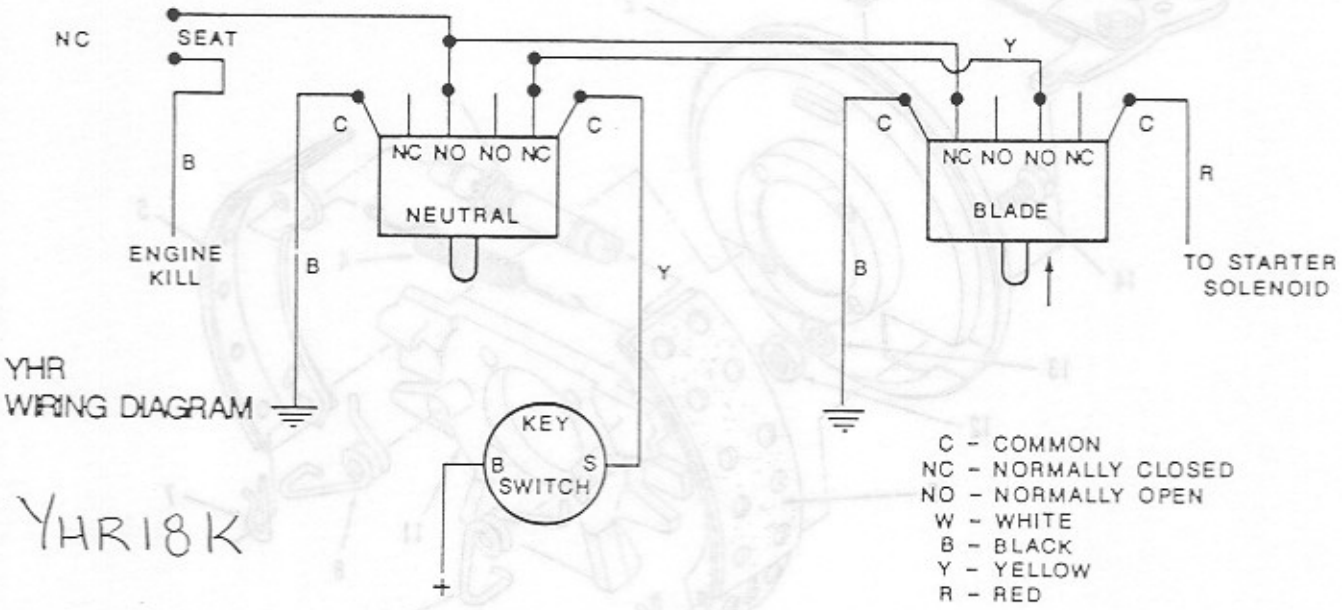

YHR
WIRING DIAGRAM

YHR18K